



Fig. 01

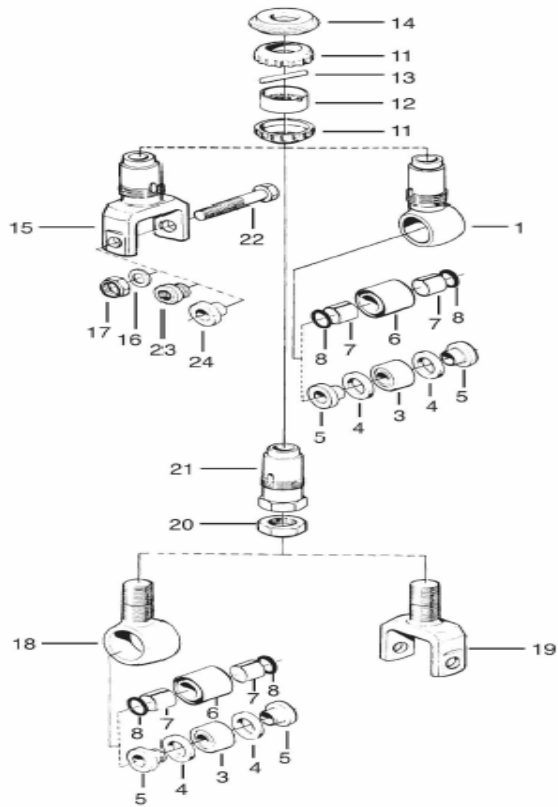


YAMAHA FZ6 Fazer			S46ER1
			YA 403
Fig No.	Part No	Description	Qty
01-01	01054-28	End eye	1
01-03	00536-04	Ball joint	1
01-04	00534-01	Seal	2
01-05	01218-10	Spacer	2
01-11	01016-01	Seal rebound adjuster	2
01-12	01128-01	Adjustment knob	1
01-13	01030-01	Pin	1
01-14	01017-01	Stop washer	1
	03204-01	Spacer 10/17/18	1

Fig.02

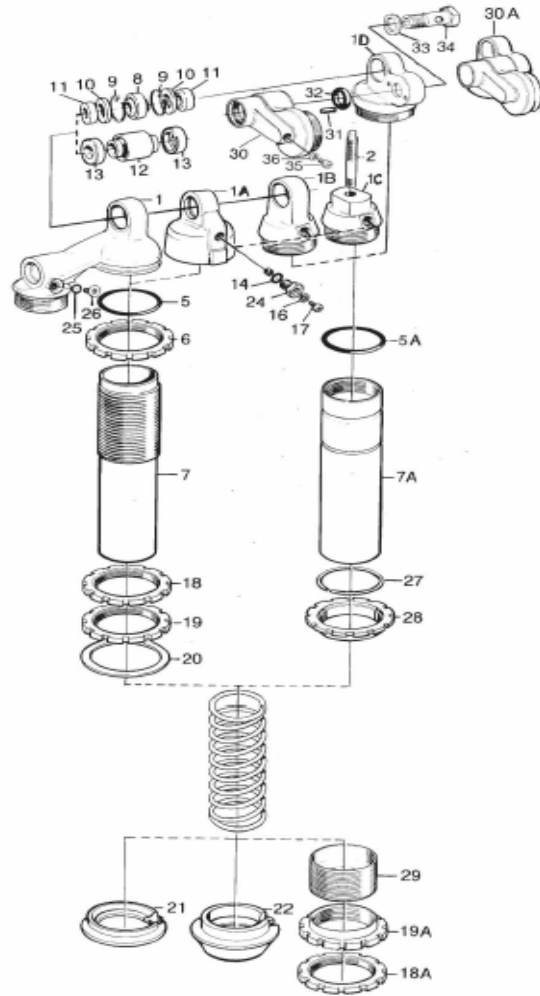

		<b>S46ER1</b>	
		<b>YAMAHA FZ6 Fazer</b>	
		<b>YA 403</b>	
<b>Fig No.</b>	<b>Part No</b>	<b>Description</b>	<b>Qty</b>
<b>Body tube</b>			
02-01A	00570-06	Cylinder head	1
02-05	00338-37	O-ring	1
02-07	01010-08	Cylinder tube	1
02-08	00536-04	Ball joint	1
02-10	00534-01	Seal	2
02-11	01218-28	Spacer	2
02-14	00583-01	O-ring	1
02-16	00338-59	O-ring	1
02-17	01050-01	Screw	1
02-18	00532-01	Lock nut	1
02-19	00531-01	Spring platform	1
02-20	00543-01	Washer	1
02-21	00516-01	Spring clip	1
02-24	00603-01	Valve assy	1
	01092-54	Spring	1
	00196-01	Sticker Varning	1

Fig. 03

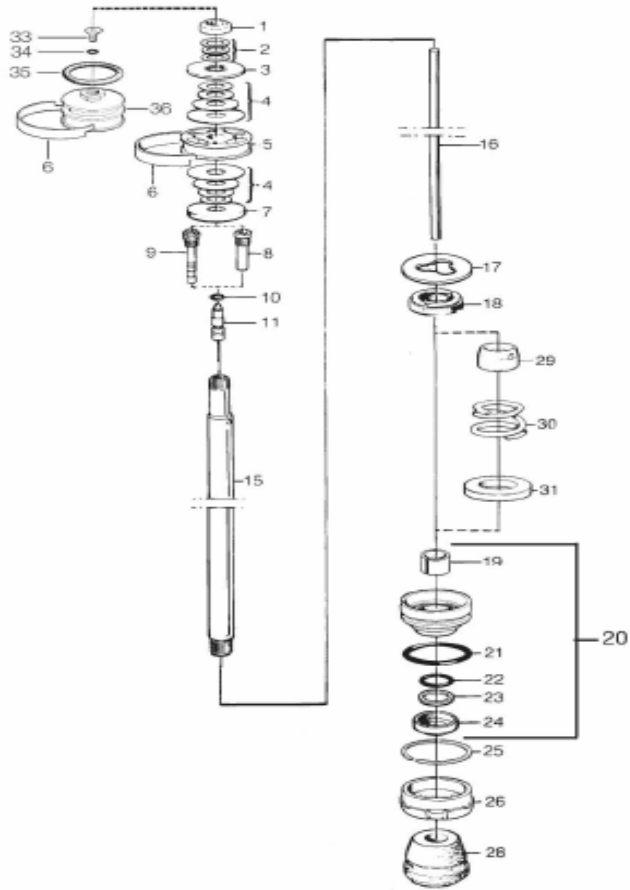

YAMAHA FZ6 Fazer			S46ER1
			YA 403
Fig No.	Part No	Description	Qty
<b>Shaft</b>			
03-01	00539-01	Lock nut	1
03-02	00578-01	Washer	5
03-03	00519-07	Stop washer	1
03-05	01114-14	Piston	1
03-06	00541-01	Piston ring	1
03-07	00519-04	Stop washer	1
03-09	05621-04	Valve assy	1
03-10	00338-14	O-ring	1
03-11	05655-04	Adjustment needle	1
03-15	05500-05	Shaft	1
03-16	00566-66	Adj.shaft	1
03-17	01069-02	Spacer	1
03-18	05115-01	Stop rubber	1
03-19	01056-13	Bushing	1
03-20	05129-04	Seal head assy	1
03-21	00576-01	O-ring	1
03-22	01027-01	X-ring	1
03-23	01032-01	Back-up ring	1
03-24	01031-02	Scraper	1
03-25	00575-01	Circlip	1
03-26	01065-01	End cap	1
03-28	00563-03	Bump rubber	1