

Shock absorber S46HR1C1S Yamaha MT-09 Tracer

YA 5350

Spare Parts List



SAFETY PRECAUTIONS

The shock absorber/front fork/steering damper is an important part of the vehicle and will affect the stability.

After installing the Öhlins product, take a test ride at low speed to make sure your vehicle has maintained stability.

Some of Öhlins products contain pressurized nitrogen gas (N_2) . Do not open, service or modify pressurized products without proper education (approved Öhlins dealer/distributor) and proper tools.

Note!

Read and ensure you understand the information in this manual and other technical documents provided by Öhlins, before you use the product.

∞ Note

Öhlins Racing AB can not be held responsible for any damage to the shock absorber/front fork/steering damper, vehicle, other property or injury to persons, if the instructions for mounting, usage and maintenance are not obeyed.

If the suspension makes an abnormal noise, or the function is irregular, or if you notice any leakage from the product, stop the vehicle immediately and return the product to an Öhlins Service Centre.

The product warranty shall only apply if the product has been operated and maintained in accordance with recommendations in this manual. If you have any questions regarding usage, service, inspection and/or maintenance contact Öhlins.

Note!

When working with the Öhlins product, read the Vehicle Service Manual.

This product was developed and designed exclusively for a specific vehicle model and shall only be installed on the intended vehicle model in its original condition as delivered from the vehicle manufacturer.

Contents

| Figure 1 - Shock absorber body | . 3 |
|---------------------------------------|-----|
| Figure 2 - Shaft assembly | . 4 |
| Figure 3 - Cylinder head | . 5 |
| Figure 4 - Reservoir assembly | . 5 |
| Figure 5 - Hose assembly | . 6 |
| Figure 6 - Hydraulic preload adjuster | . 7 |
| Figure 7 - Compression adjuster | . 8 |

SAFETY SYMBOLS

In this manual, mounting instructions and other technical documents, important information concerning safety is distinguished by the following symbols:

Λ

The Safety Alert Symbol means: Warning! Your safety is involved.

The Warning Symbol means: Failure to follow warning instructions can result in severe or fatal injury to anyone working with, inspecting or using the shock absorber, or to bystanders.

Caution!


The Caution Symbol means: Special precautions must be taken to avoid damage to the shock absorber.

Note!

The Note Symbol indicates information that is important regarding procedures.

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Figure 1 - Shock absorber body

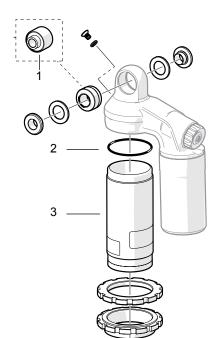

5

| Pos | Part No | Pcs | Description | Notes |
|------|----------|-----|-------------------|-------|
| 1-1 | 00124-16 | 1 | Rubber bushing | |
| 1-2 | 00338-37 | 1 | O-ring | |
| 1-3 | 04210-11 | 1 | Cyl. tube | |
| 1-4 | 00543-01 | 1 | Washer | |
| 1-5 | 01092-31 | 1 | Spring | |
| 1-6 | 01016-01 | 2 | Seal rebound adj. | |
| 1-7 | 01030-01 | 1 | Pin | |
| 1-8 | 01128-01 | 1 | Adjuster | |
| 1-9 | 00563-03 | 1 | Bump rubber | |
| 1-10 | 00629-01 | 1 | Spring clip | |
| 1-11 | 01017-01 | 1 | Stop washer | |
| 1-12 | 01054-07 | 1 | End eye | |



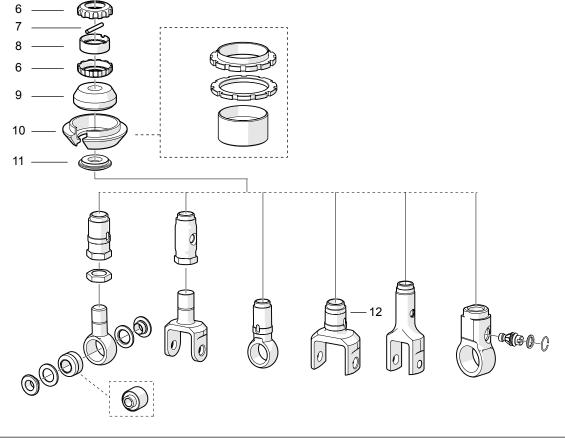



Figure 2 - Shaft assembly

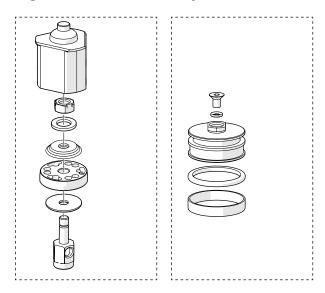

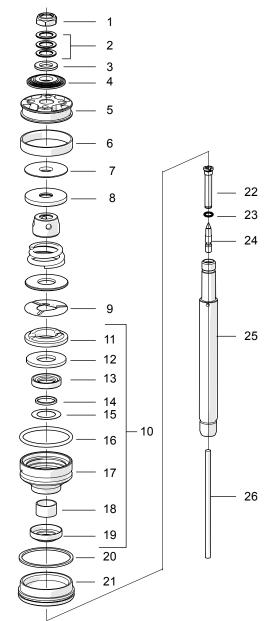


| Pos | Part No | Pcs | Description | Notes |
|------|----------|-----|----------------|----------------|
| 2-1 | 00539-01 | 1 | Lock nut | |
| 2-2 | 00578-01 | 3 | Washer | |
| 2-3 | 00519-07 | 1 | Valve stop | |
| 2-4 | - | - | Shim stack | See spec. card |
| 2-5 | 03366-40 | 1 | Piston | |
| 2-6 | 00541-01 | 1 | Piston ring | |
| 2-7 | - | - | Shim stack | See spec. card |
| 2-8 | 00519-04 | 1 | Valve stop | |
| 2-9 | 01069-03 | 2 | Spacer | |
| 2-10 | 05129-09 | 1 | Seal head assy | |
| 2-11 | 03067-03 | 1 | Stop rubber | |
| 2-12 | 04752-03 | 1 | Washer | |
| 2-13 | 04717-03 | 1 | Seal | |
| 2-14 | 01032-23 | 1 | Back up ring | |
| 2-15 | 04729-04 | 1 | Shim | |
| 2-16 | 00338-46 | 1 | O-ring | |
| 2-17 | 05122-06 | 1 | Seal head | |
| 2-18 | 01056-14 | 1 | Bushing | |
| 2-19 | 01031-02 | 1 | Scraper | |
| 2-20 | 00575-01 | 1 | Circlip | |
| 2-21 | 01065-31 | 1 | End cap | |
| 2-22 | 05621-04 | 1 | Shaft jet | |
| 2-23 | 00338-14 | 1 | O-ring | |
| 2-24 | 05655-04 | 1 | Adj. needle | |
| 2-25 | 05500-16 | 1 | Shaft | |
| 2-26 | 00566-41 | 1 | Adj. shaft | |

Figure 3 - Cylinder head

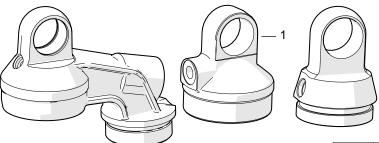


| Pos | Part No | Pcs | Description | Notes |
|-----|----------|-----|---------------|-------|
| 3-1 | 20570-01 | 1 | Cylinder head | |

Figure 4 - Reservoir assembly

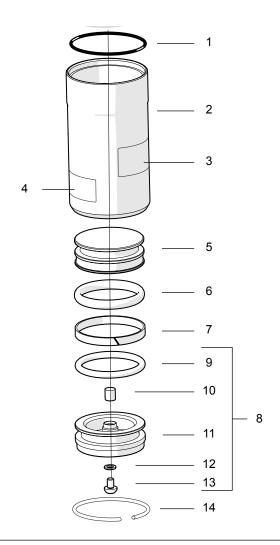


| Pos | Part No | Pcs | Description | Notes |
|------|----------|-----|--------------------|--------|
| 4-1 | 00338-24 | | O-ring | |
| 4-2 | 00302-02 | | Reservoir | |
| 4-3 | 00191-06 | | Sticker "Öhlins" | |
| 4-4 | 00196-01 | | Sticker "Warning" | |
| 4-5 | 00305-01 | | Reservoir piston | |
| 4-6 | 00338-26 | | O-ring | |
| 4-7 | 00340-01 | | Teflon band | |
| 4-8 | 00161-03 | | Reservoir top assy | |
| 4-9 | 00338-04 | | O-ring | |
| 4-10 | 00604-01 | | Rubber valve | |
| 4-11 | 00561-03 | | Reservoir top | |
| 4-12 | 00338-59 | | O-ring | |
| 4-13 | 01050-01 | | Screw | |
| 4-14 | 00329-01 | | Circlip | |
| | 03102-19 | 1 | Bracket reservoir | See MI |
| | 00382-16 | 1 | Screw | See MI |
| | 01046-36 | 2 | Screw M6x12 | See MI |

Figure 5 - Hose assembly

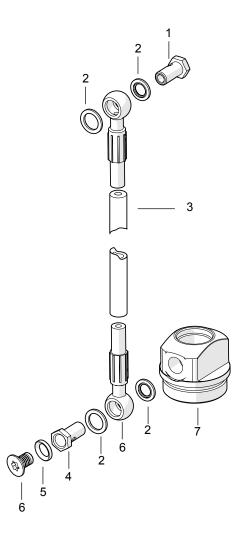

| Pos | Part No | Pcs | Description | Notes |
|-----|----------|-----|---------------|-------|
| 5-1 | 00631-01 | 1 | Banjo bolt | |
| 5-2 | 00586-01 | 4 | Seal washer | |
| 5-3 | 03100-04 | 1 | Hose | |
| 5-4 | 00631-02 | 1 | Banjo bolt | |
| 5-5 | 00438-33 | 1 | O-ring | |
| 5-6 | 00382-07 | 1 | Screw | |
| 5-7 | 00862-02 | 1 | Reservoir end | |


Figure 6 - Hydraulic adjuster

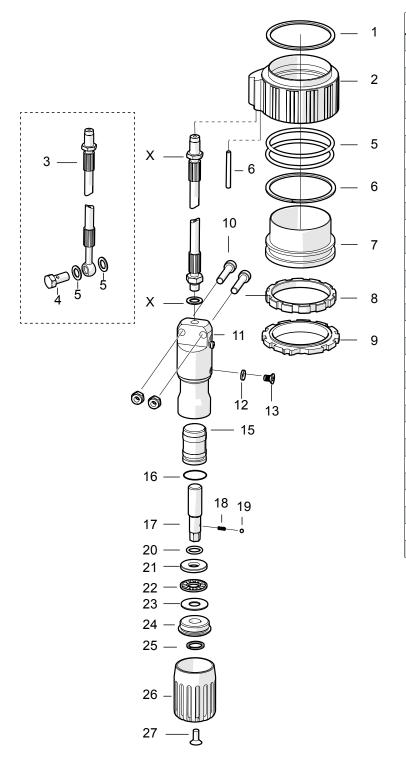

| Pos | Part No | Pcs | Description | Notes |
|------|----------|-----|-----------------|---------------|
| 6-1 | 03611-01 | 1 | Support ring | |
| 6-2 | 03607-01 | 1 | Housing | |
| 6-3 | 01042-08 | 1 | Hose banjo bolt | |
| 6-4 | 00831-02 | 1 | Banjo bolt | |
| 6-5 | 01048-01 | 2 | Seal washer | |
| 6-6 | 03613-01 | 1 | Pin | |
| 6-5 | 00338-90 | 2 | O-ring | |
| 6-6 | 03610-01 | 1 | Support ring | |
| 6-7 | 03606-01 | 1 | Inner sleeve | |
| 6-8 | 03609-01 | 1 | Lock nut | |
| 6-9 | 03608-01 | 1 | Guide nut | |
| 6-10 | 01046-05 | 2 | Screw | |
| 6-11 | 03600-01 | 1 | Adj. cylinder | |
| | 00338-79 | 1 | O-ring | Filling screw |
| | 00382-07 | 1 | Screw | Filling screw |
| 6-12 | 03614-01 | 1 | Seal washer | |
| 6-13 | 03601-02 | 1 | Guide screw | |
| 6-15 | 03604-01 | 1 | Piston | |
| 6-16 | 00338-89 | 1 | O-ring | |
| 6-17 | 03602-01 | 1 | Adj. screw | |
| 6-18 | 03083-01 | 1 | Spring | |
| 6-19 | 00884-03 | 1 | Ball | |
| 6-20 | 00131-03 | 1 | Circlip | |
| 6-21 | 03072-02 | 1 | Thrust washer | |
| 6-22 | 01023-02 | 1 | Needle bearing | |
| 6-23 | 03073-02 | 1 | Thrust washer | |
| 6-24 | 03603-01 | 1 | Cover | |
| 6-25 | 00338-88 | 1 | O-ring | |
| 6-26 | 03605-01 | 1 | Knob | |
| 6-27 | 00382-08 | 1 | Screw | |
| | 01165-17 | 1 | Bracket | See MI |

Figure 7 - Compression adjuster

| Pos | Part No | Pcs | Description | Notes |
|------|----------|-----|---------------------|---------------|
| 7-1 | 00430-07 | 1 | Nut | |
| 7-2 | 00641-01 | 1 | Clamp washer | |
| 7-3 | - | - | Shim stack | see spec.card |
| 7-4 | 01244-07 | 1 | Valve | |
| 7-5 | 01245-01 | 1 | Check valve shim | |
| 7-6 | 01246-01 | 1 | Wave washer | |
| 7-7 | 01247-01 | 1 | Check valve housing | |
| 7-9 | 01243-08 | 1 | End piece | |
| 7-10 | 01242-06 | 1 | Adj. needle | |
| 7-11 | 00338-27 | 1 | O-ring | |
| 7-12 | 00338-79 | 1 | O-ring | |
| 7-13 | 01473-06 | 1 | Circlip | |
| 7-14 | 00833-01 | 2 | Spring | |
| 7-15 | 00884-07 | 2 | Ball | |
| 7-17 | 00820-02 | 1 | Knob | |
| 7-18 | 00828-01 | 1 | Screw | |

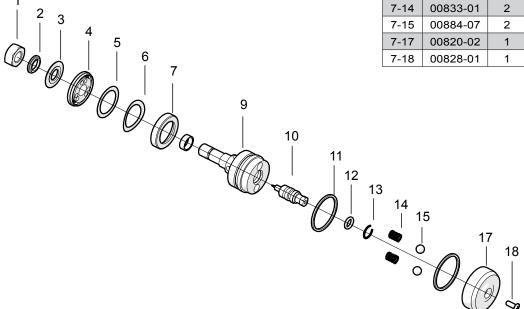

Your Öhlins retailer:

Öhlins Racing AB Box 722 SE-194 27, Upplands Väsby Sweden

Phone: +46 (0)8 590 025 00 Fax: +46 (0)8 590 025 80 www.ohlins.com

