





Fig. 01

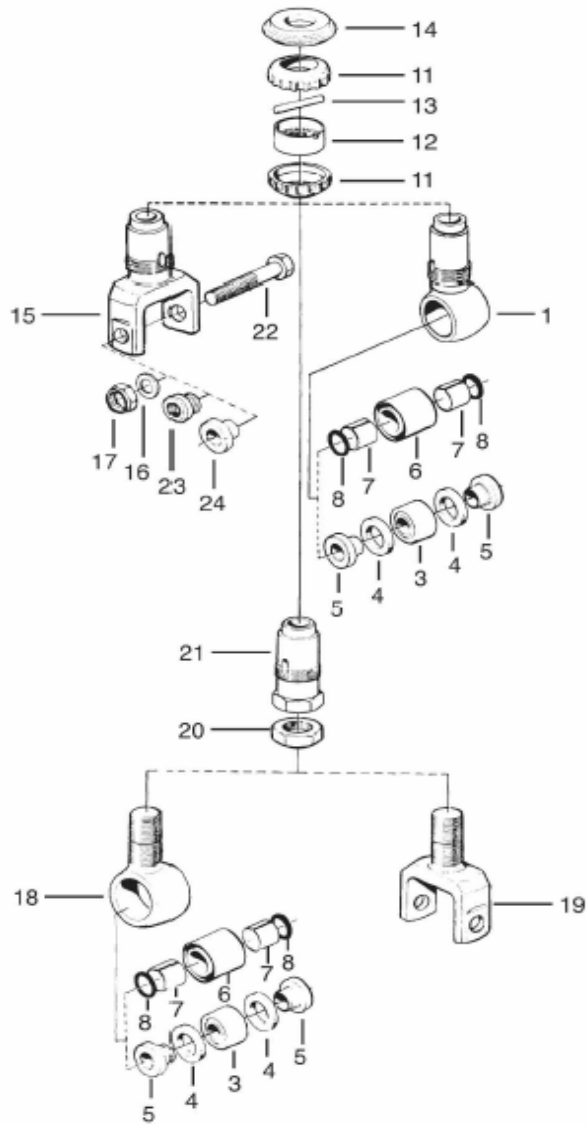

BMW			
BM 503	46ER	BMW R1200RT front	BM 503
Fig No.	Part No	Description	Qty
End eye			
01-01	01054-22	End eye 16/53/26	1
01-03	00536-02	Ball joint dia 14/26/15	1
01-04	00534-01	Seal ball joint 16/26/3.5	2
01-05	01218-12	Spacer, ball joint 10x30 al	2
01-11	01016-01	Seal rebound adjuster	2
01-12	01128-01	Adjustment knob 25/33.1	1
01-13	01030-01	Pin 4x30 CPr h8	1
01-14	01017-01	Stop washer 20/46/10	1




Fig. 02

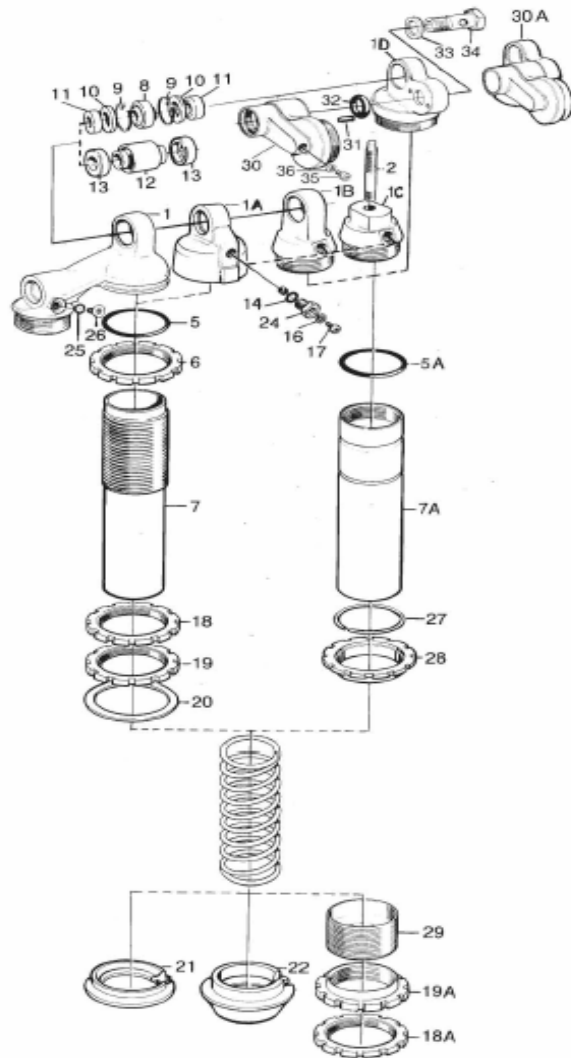

BMW	46ER	BMW R1200RT front	BM 503
Fig No.	Part No	Description	Qty
Body tube			
02-01C	01281-02	Cylinder head hose, pin 46	1
02-02	00441-01	Stud M10/M10x1.25 /63	1
02-05A	00338-32	O-ring 44.12x2.62 NBR70	1
02-07A	04211-19	Cylinder tube 46/163 Al	1
02-14	00338-07	O-ring 10.82x1.78 NBR70 £	1
02-16	00338-59	O-ring 4.5x1.5 NBR70 £	1
02-17	01050-01	Screw MRT A4 ISO7045 M4x5 £	1
02-18	00532-01	Lock nut 52/73	1
02-18A	01174-01	Lock nut M55x1.5/5	1
02-19	00531-01	Spring platform 52/56.5/73	1
02-19A	01173-01	Spring seat 55/56.5/73	1
02-20	00543-01	Washer 57/73/1	1
02-21	01286-01	Spring clip for springs 57	1
02-24	00603-03	Valve assy	1
02-29	01172-01	Sleeve M55/x1.5/3	1
	01096-14	Spring 57/190/60	1



Fig. 03

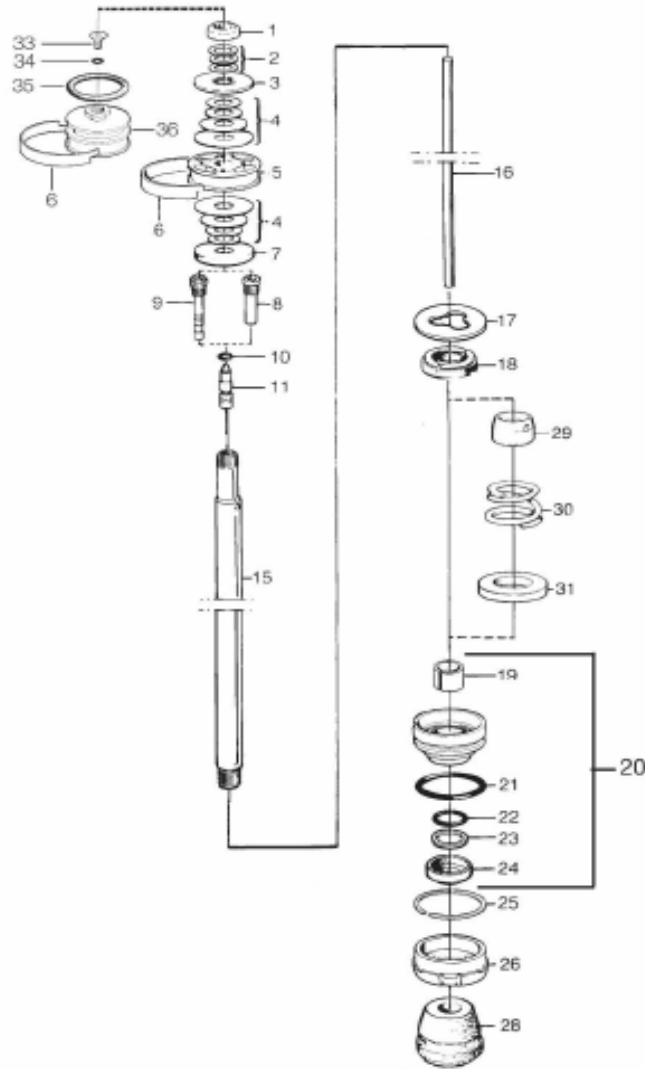

BMW BM 503 Fig No.	46ER Part No	BMW R1200RT front Description	BM 503 Qty
Shaft			
03-01	00539-01	Lock nut M12x1.25/7	1
03-02	00578-01	Washer PS 12/18/1	4
03-03	00519-05	Stop washer 12/25/2 flat	1
03-05	03366-01	Piston 12/46 MX sintered	1
03-06	00541-01	Piston ring 46 (INA 781561-1)	1
03-07	00519-08	Stop washer 12/37/4 TOP-OUT	1
03-08	05621-03	Shaft jet bleed 4/M7/37.7	1
03-10	00338-14	O-ring 3.1x1.6 NBR70 £	1
03-11	05655-03	Adjustment needle diam.4	1
03-15	05500-09	Shaft 16/183	1
03-16	00566-23	Adj.shaft 123.5/4.5	1
03-17	01069-03	Spacer 16/37.8/3 Red	2
03-18	05115-01	Stop rubber 23/36/8	1
03-19	01056-13	Bushing 16/18/12 DU	1
03-20	05129-04	Seal head assy 46/16	1
03-21	00576-01	O-ring 40.2x3 NBR70	1
03-22	01027-01	X-ring 15.54x2.62 NBR 88	1
03-23	01032-01	Back-up ring 16/20.6/1.4 PTFE	1
03-24	01031-02	Scraper 16/26x8/5.5	1
03-25	00575-01	Circlip SB 46, stainless	1
03-26	01065-01	End cap 46/16	1
03-28	00563-03	Bump rubber 16/47/19 PUR 650	1
03-29	01132-02	Top-out spring guide 16 - 5500shaft	1
03-30	01131-01	Stop spring 24.5/21.5/400N	1
03-31	01269-02	Spacer 16/38/2	1